

No Power  
D105~D108 are Defective

12V No Power  
Q123 is Defective


Switching Error  
IC101 is Defective

No Power  
FR101 is Defective



5V No Power  
Q126 is Defective

3.3V No Power  
Q121 is Defective

Switching Error  
IC102 is Defective

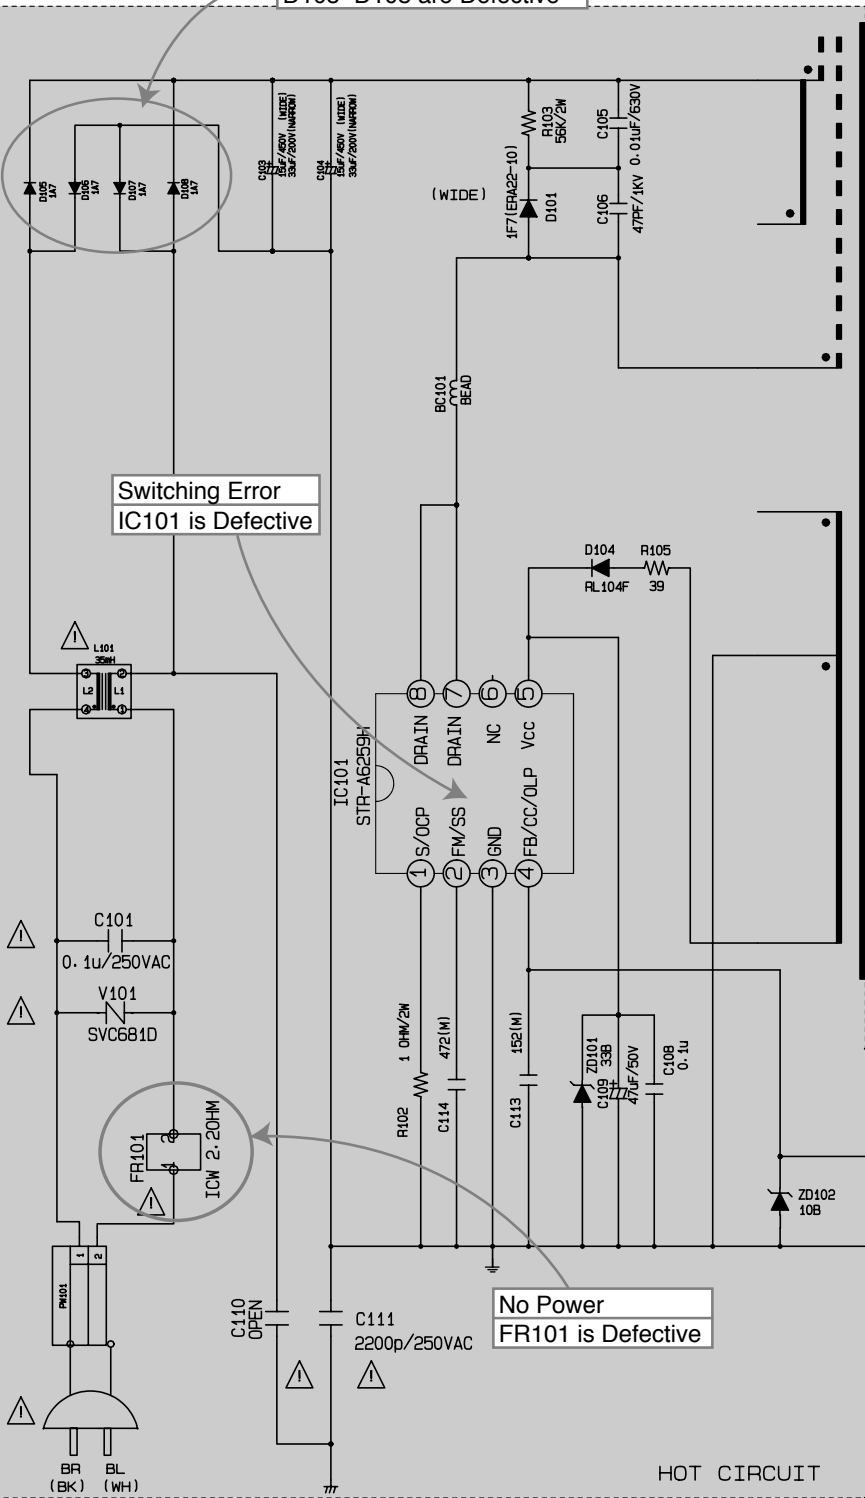

T101  
EER2532 W05S

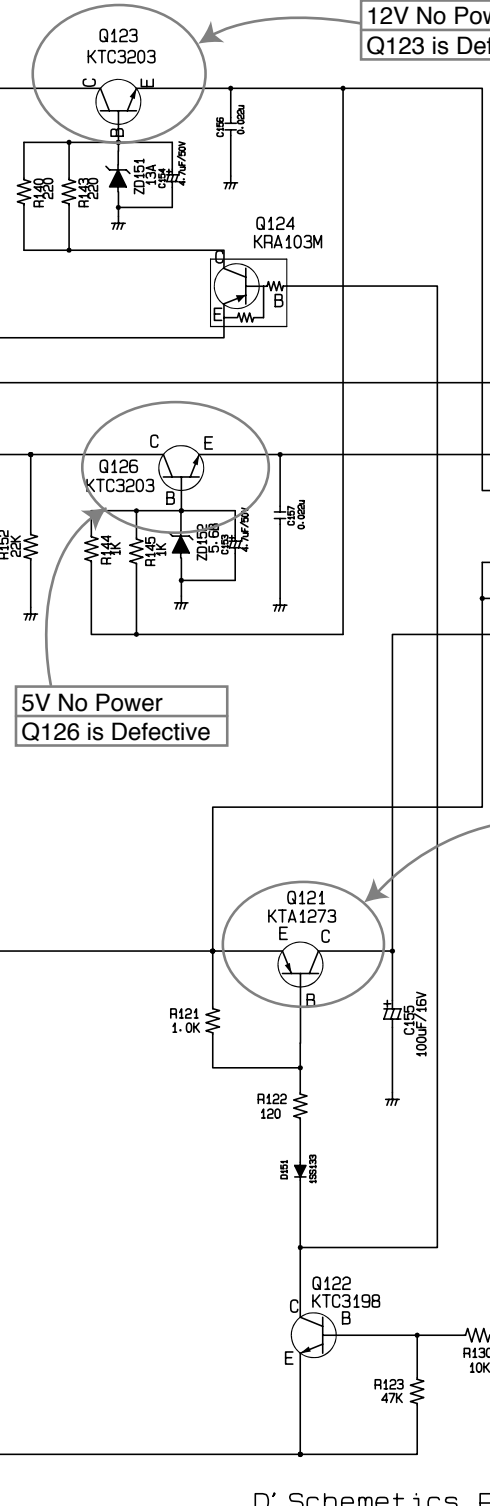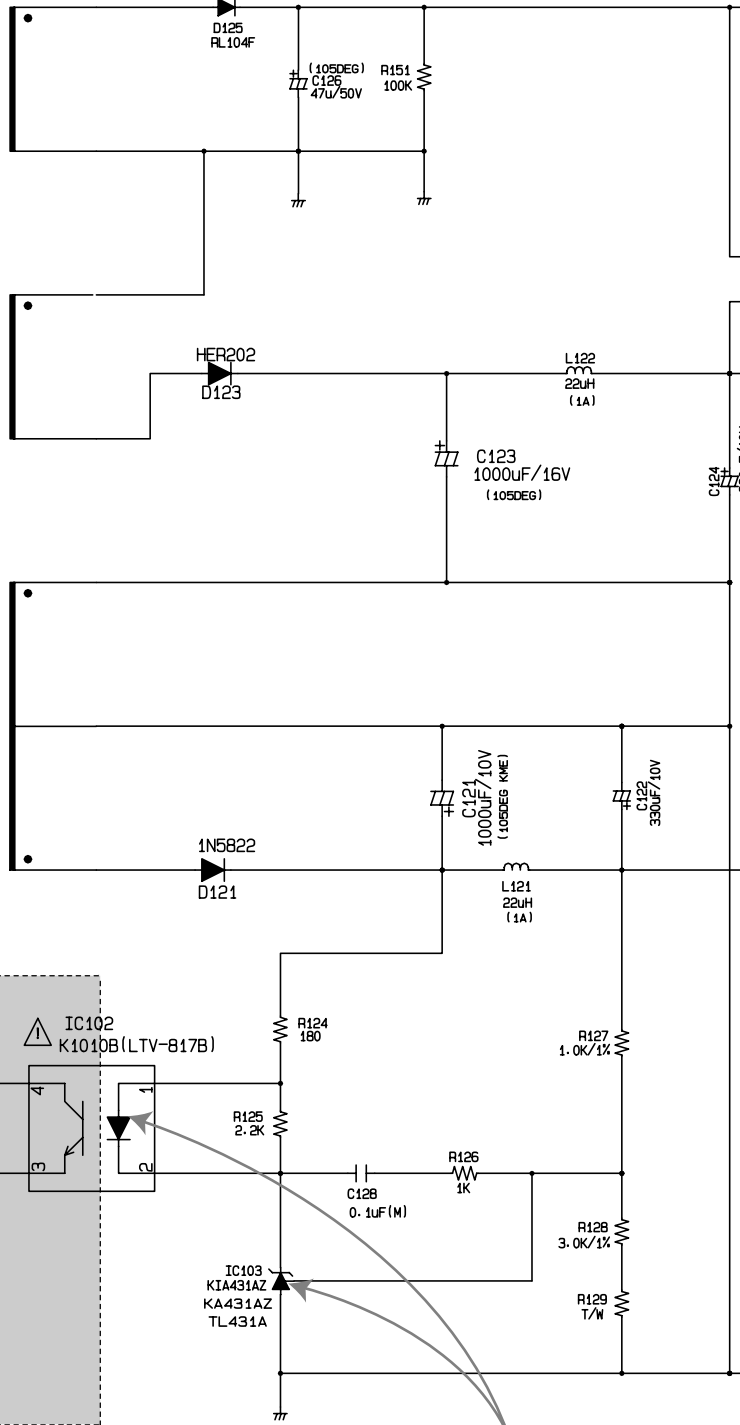

P101	
1	5.6VA(M)
2	M. GND
3	5V
4	12V
5	A. GND
6	3.3VA
7	3.3VA
8	3.3V
9	D. GND
10	P. CTL

Symbol denotes AC ground.

NOTE) Warning Parts that are shaded are critical